Whandar Shenzhen Handar Optical Technology Co.,Ltd SFP-T-10-100-1000BASE AUTO Copper SFP Transceiver

1.PRODUCT FEATURES

- Up to 1.25 Gb/s bi-directional data links
- Hot-pluggable SFP footprint
- Low power dissipation(1.05W typical)
- Compact RJ-45 connector assembly
- Fully metal enclosure, for lower EMI
- RoHS compliant and lead-free
- Single +3.3V power supply
- 10/100/1000 BASE-T operation in host systems with SGMII interface
- 1.25 Gigabit Ethernet over Cat 5 cable
- Ambient Operating temperature: 0°C to +70°C

2.PRODUCT DESCRIPTION

SFP-T-AUTO Copper Small Form Pluggable (SFP) transceivers are based on the SFP Multi Source Agreement (MSA) . They are compatible with the Gigabit Ethernet and 10/100/1000BASE-T standards as specified in IEEE Std 802.3 .

The SFP-T-AUTO uses the SFP's RX_LOS pin for link indication. If pull up SFP's TX_DISABLE pin, PHY IC be reset.

3.PRODUCT SELECTION

Product part Number	Link Indicator on RX_LOS Pin	Support 10/100/1000base-T	Support SGMII
SFP-T-AUTO	Yes	Yes	Yes

4.SFP to Host Connector Pin Out

Pin	Symbol	Name/Description	Ref.
1	VEET	Transmitter Ground (Common with Receiver Ground)	1
2	TFAULT	Transmitter Fault. Not supported.	
3	TDIS	Transmitter Disable. Laser output disabled on high or open.	2
4	MOD_DEF(2)	Module Definition 2. Data line for Serial ID.	3
5	MOD_DEF(1)	Module Definition 1. Clock line for Serial ID.	3
6	MOD_DEF(0)	Module Definition 0. Grounded within the module.	3
7	Rate Select	No connection required	
8	LOS	Loss of Signal indication. Logic 0 indicates normal operation.	
9	VEER	Receiver Ground (Common with Transmitter Ground)	1
10	VEER	Receiver Ground (Common with Transmitter Ground)	1
11	VEER	Receiver Ground (Common with Transmitter Ground)	1
12	RD-	Receiver Inverted DATA out. AC Coupled	
13	RD+	Receiver Non-inverted DATA out. AC Coupled	
14	VEER	Receiver Ground (Common with Transmitter Ground)	1
15	VCCR	Receiver Power Supply	
16	VCCT	Transmitter Power Supply	
17	VEET	Transmitter Ground (Common with Receiver Ground)	1
18	TD+	Transmitter Non-Inverted DATA in. AC Coupled.	
19	TD-	Transmitter Inverted DATA in. AC Coupled.	
20	VEET	Transmitter Ground (Common with Receiver Ground)	1

Notes:

- 1. Circuit ground is connected to chassis ground
- 2. PHY disabled on T_DIS $\,$ > 2.0V or open, enabled on T_DIS < 0.8V
- 3. Should be pulled up with 4.7k 10k Ohms on host board to a voltage between 2.0 V and 3.6 V.

MOD_DEF(0) pulls line low to indicate module is plugged in.

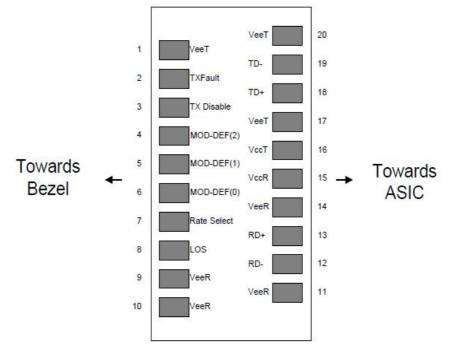


Figure 1. Diagram of host board connector block pin numbers and names

5. +3.3V Volt Electrical Power Interface

The SFP-T -AUTO has an input voltage range of 3.3 V +/- 5%. The 4V maximum voltage is not allowed for continuous operation.

+3.3 Volt Electrical Power										
Interface										
Parameter	Symbol	Min	Тур	Max	unit	Notes/Conditions				
						1.2W max power over				
Supply Current	poly Current Is 320	320	375	mA	full range of voltage					
Supply current	15		520	575	1117 \	and temperature.				
						See caution note below				
Input Voltage	Vcc	3.13	3.3	3.47	V	Referenced to GND				
Maximum Voltage	Vmax			4	V					
Surge Current	Isurge			30	mA	Hot plug above steady state current. See caution note below				

Caution: Power consumption and surge current are higher than the specified values in the

SFP MSA

6. Low-Speed Signals

MOD_DEF(1) (SCL) and MOD_DEF(2) (SDA), are open drain CMOS signals (see

section VII, "Serial Communication Protocol"). Both MOD_DEF(1) and MOD_DEF(2) must be pulled up to host_Vcc

Parameter	Symbol	Min	Max	unit	Notes/Conditions
SFP Output LOW	VOL	0	0.5	V	4.7k to 10k pull-up to host_Vcc, measured at host side of connector
SFP Output HIGH	VOH	host_Vcc -0.5	host_Vcc + 0.3	V	4.7k to 10k pull-up to host_Vcc, measured at host side of connector
SFP Input LOW	VIL	0	0.8	V	4.7k to 10k pull-up to Vcc, measured at SFP side of connector
SFP Input HIGH	VIH	2	Vcc + 0.3	V	4.7k to 10k pull-up to Vcc, measured at SFP side of connector

7. High-Speed Electrical Interface

All high-speed signals are AC-coupled internally.

High-Speed Electrical Interface, Transmission Line-SFP										
Parameter	Symbol	Min	Тур	Max	unit	Notes/Conditions				
Line Freewoord	0	C1	125		MHz	5-level encoding, per				
Line Frequency	fL		125		IVITIZ	IEEE 802.3				
Tx Output Impedance	Zout,TX		100		Ohm	Differential, for all frequencies between 1MHz and 125MHz				
Rx Input Impedance	Zin,RX		100		Ohm	Differential, for all frequencies between 1MHz and 125MHz				

High-Speed Electrical Interface, Host-SFP									
Parameter	Symbol	Min	Тур	Max	unit	Notes/Conditions			
Single ended data input swing	Vinsing	250		1200	mV	Single ended			
Single ended data output swing	Voutsing	350		800	mV	Single ended			
Rise/Fall Time	T _r ,T _f		175		psec	20%-80%			
Tx Input Impedance	Zin		50		Ohm	Single ended			
Rx Output Impedance	Zout		50		Ohm	Single ended			

8.General Specifications

General

Parameter	Symbol	Min	Тур	Max	unit	Notes/Conditions
						IEEE 802.3 compatible.
Data Rate	BR	10		1000	Mb/sec	See Notes 2 through 4
						below
Cable Length	L			100	m	Category 5 UTP. BER

Notes:

- 1. Clock tolerance is +/- 50 ppm
- 2. By default, the SFP-T-AUTO is a full duplex device in preferred master mode
- 3. Automatic crossover detection is enabled. External crossover cable is not required

9.Environmental Specifications

Environmental Specifications								
Parameter	Symbol	Min	Тур	Max	unit	Notes/Conditions		
Operating Temperature	Тор	0		70	°C	Case temperature		
Storage Temperature	Tsto	-40		85	°C	Ambient temperature		

10. Serial Communication Protocol

All HANDAR SFPs support the 2-wire serial communication protocol outlined in the SFP MSA. These SFPs use an MCU, can be accessed with address of A0h.

Serial Bus Timing, Requirements										
Parameter Symbol Min Typ Max unit Notes/Conditions										
I ² C Clock Rate										

11. Mechanical Specifications (Unit:mm)



